USER MANUAL

RC Ferrari GT Collection, Art. M391

Congratulations on your purchase of a Millennium 2000 product. We hope you will have a lot of fun with it. Please follow the instructions in this manual to make the best possible use of the product.

Preparing the vehicle & Inserting the batteries

Remote control:

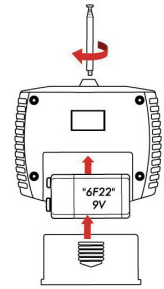

- Take the remote control and open the battery compartment at the rear by pressing down with two fingers and, at the same time, sliding the cover downwards.
- Insert a 9V-batterie (type LF22) ensuring correct polarity. Replace the battery compartment cover.
- Fit the antenna provided on top of the remote control by screwing it into its corresponding opening. Make sure that you don't bend the antenna. It should sit firmly and tightly in its mounting.

Vehicle:

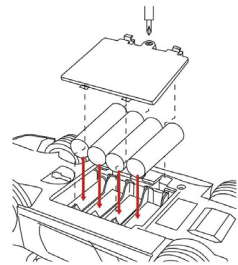

- Place the vehicle upside-down onto a flat surface (e.g. a table.
- Open the battery compartment by first removing the screw (using a suitable screwdriver) and then pressing down on the locking tab and lifting up the cover.
- Depending on the model used, your remote-controlled vehicle requires 4 x 1.5 V AA-type batteries (for F430 & 599 GTB) or 3 x 1.5 V AA-type batteries (for FXX).
- When inserting the batteries, ensure correct polarity following the diagram (+/- poles) inside the battery compartments.
- Replace the battery compartment cover and secure it with the screw.

Use of rechargeable batteries

You may also use **rechargeable batteries** to operate the RC-controlled vehicle. However, please take note that the operating time may be reduced in comparison to alkaline batteries. Please also take note that batteries must be removed from the vehicle before they are recharged.

Battery safety

- Only adults should replace batteries.
- Use only batteries of the required size and type (4/3 x AA & 1 x 6F22) and do not mix old and new batteries.
- Batteries are to be inserted with the correct polarity (+ / -).
- Removed exhausted batteries immediately from the toy.
- The supply terminals are not to be short-circuited.
- For longer periods of non-use (one week or longer), the batteries should be removed from the toy.
- The toy may be subject to electro-static charge. Should this be the case, remove and then re-insert the batteries to reset the unit.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Dispose of batteries properly, i.e. at special public collection points. Do not dispose of them with your domestic refuse.
- Help to protect the environment.

Vehicle operation

Once the batteries have been inserted (as described), the remote-controlled vehicle is now ready for use.

- Position the switch at the underside of the vehicle from Off to On.
- Position the switch in the centre of the remote control from Off to On.
- Use the left joystick of the remote control for forward/backward movement. The right joystick controls the left/right movement of the vehicle.
- If the vehicle does not run truly straight, the steering needs to be adjusted using the small lever at the underside of the vehicle: if the vehicle pulls slightly left, adjust the lever slightly to the right (and vice versa).
- Don't forget to return the switches on vehicle and remote control to their Off-positions after use.

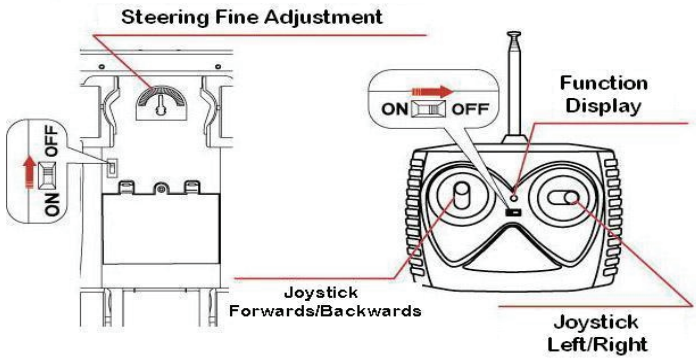

Cleaning and care

- The toy should only be cleaned using a suitable dry cloth, e.g. a micro-fibre cloth.
- Prevent the toy from getting wet; any humidity inside the electronic components could result in severe damage.
- Protect the toy from the effects of prolonged direct sunlight.
- Always slide the telescopic antenna down during periods of non-use and ensure it doesn't break.
- Avoid collisions at all times when the vehicle is operated. Collisions can result in damage and components might break etc.

Using two vehicles at the same time

- If you intend to operate two vehicles at the same time, please note that two different frequencies are required for operation.
- In general, his product comes with a frequency of either 27 MHz and 40 MHz. Information regarding the frequency of your vehicle can be found on a sticker at the underside of the vehicle, and also on the remote control.

Possible problems and their solutions

- If the vehicle cannot be properly controlled even from a short distance, the batteries in the vehicle must be replaced.
- Note that the signal strength is subject to certain factors e.g. other electrical appliances or walls. Always choose an unobstructed area for playing.
- The prevent the vehicle from getting out of range, keep an eye on the distance: the range of the remote control is limited. If you are unable to control the vehicle or if it stops, decrease the distance.

Caution

Not suitable for children under 6 years.
Danger of suffocation due to small parts.

Electric toy, to be used under adult supervision only.

Please contain this packaging as it contains relevant information. If the product is given to a third party, these instructions should accompany it.

EU Declaration of Conformity

Millennium 2000 GmbH hereby confirms that the product M391 – RC Ferrari GT Collection is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EG.

The Declaration of Conformity can be requested at the following email address:
Support@computerchess.com

Subject to change without notice, errors and omissions excepted.

The present manual has been compiled with great care and has been checked for correct content. Nevertheless, no liability will be accepted in the unlikely event that errors should be found.

No reproduction of this manual (in whole or in part) is allowed without prior written approval.

Copyright © 2009, Millennium 2000 GmbH, Aschheim, Germany.

Import & Distribution: Millennium 2000 GmbH
Heisenbergbogen 1 (Dornach)
85609 Aschheim, Germany

Tel: 0049 89 290035 0
Fax: 0049 89 290035 20
E-Mail: support@computerchess.com

Internet:
www.millennium2000.de

This toy is an electric appliance. Do not dispose of it in your domestic garbage; disposal should only be done through public collection point.

CE 0678

Guarantee conditions

You have purchased a quality product from one of the most experienced manufacturers of electronic equipment. For this product a 24-month statutory guarantee – which has been extended to 36 months for this product – as well as the following guarantee conditions are applicable.

1) We undertake to repair free of charge any damages and faults in your product which can be traced back to a manufacturing defect, provided we are notified immediately upon detection and within the guarantee period.
2) The guarantee does not cover batteries, nor easily breakable parts such as glass or plastic. A guarantee obligation does not apply in case of minor deviations from product specifications which are insignificant for the value or functional soundness of the product, by damages due to chemical, electro-chemical or aqueous effects as well as damages generally resulting from external abnormal conditions.
3) The guarantee claim is executed whereby defective parts are repaired free of charge or replaced with parts free of defects according to our discretion. Returned products are to be returned to the place of purchase or to be sent to our service point. Replaced parts shall be our property.
4) In case of any claim, the proof of purchase specifying the date of purchase or delivery must be submitted or accompany the defective product.
5) In case of unauthorized repairs, modifications or changes to the product, this guarantee shall become void.
6) Guarantee claims neither cause an extension of the specified guarantee claim limit nor do they set a new limit. The guarantee claim limit for replaced components shall end with the guarantee limit for the complete product.
7) Extended claims, especially claims such as for compensation for damages caused outside the product are ruled out unless justified by statutory regulations.
8) Defective products may be sent to this address also after expiry of the guarantee claim limit; testing and repairs after the expiry of the guarantee period will be charged.
9) Should any queries as regards operations of the product arise which are not adequately explained in the operating instructions, you are welcome to call the MILLENNIUM Service-Hotline of your country. The contact details can be found o the separate guarantee card.